



BATTERY CHANGE STANDARD

STANDARD

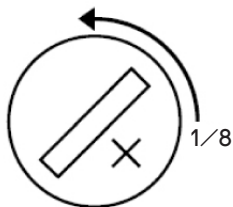


All models except skin, touch, fun

SKIN

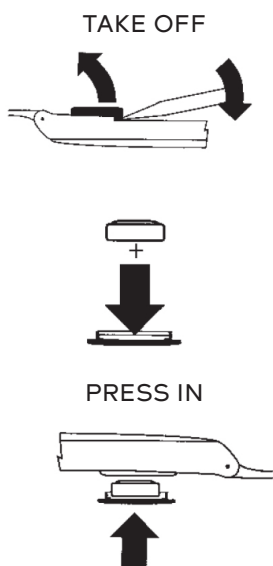

Open carefully the battery cover with a thin screwdriver. Press the battery and cover unit from underneath firmly back to the watch case.

TOUCH / FUN SCUBA

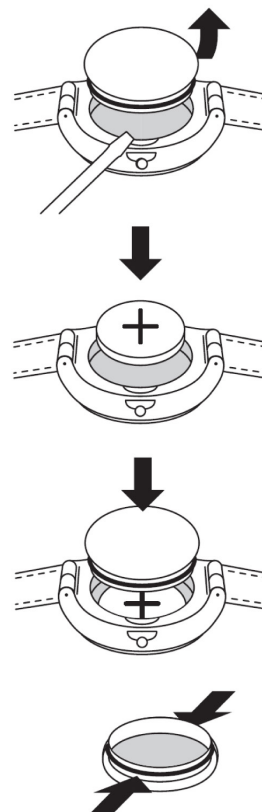

1. Open carefully the plastic cover with a thin screwdriver.
2. Replace the battery, plus (+) side up.
3. Press the plastic cover firmly back on its position (small click).

Note: Check carefully that the rubber gasket is on its correct position and is not harmed.

BATTERY LIST

| <u>Collection</u> | <u>Renata Designation</u> | <u>Ø t x Ht (mm)</u> | <u>Battery voltage (V)</u> |
|--|---------------------------|---|----------------------------|
| Autoquartz | MT 920 | 9.50 x 2.10 | Accu |
| Beat Alu | CR1632 | 16.0 x 3.20 | 3.00 |
| Beat Alu Medium | CR1632 | 16.0 x 3.20 | 3.00 |
| Beat Alumini | 350 | 11.60 x 3.60 | 1.55 |
| Beat Plastic + Beat Plastic Access | CR1632 | 16.0 x 3.20 | 3.00 |
| Flik Flak | 377 | 6.80 x 2.60 | 1.55 |
| Flik Flak Scuba | 377 | 6.80 x 2.60 | 1.55 |
| Fun Scuba/Boarder | CR2025 | 20.0 x 2.50 | 3.00 |
| Gent | 390 | 11.60 x 3.10 | 1.55 |
| Gent Access / Gent Snowpass | 390 | 11.60 x 3.10 | 1.55 |
| Gent Loomi/ Gent Loomi Touch | 389 | 11.60 x 3.10 | 1.55 |
| Gent X-Large | 390 | 11.60 x 3.10 | 1.55 |
| Irony Big Inox Alu 1 | 394 397 377 | 9.50 x 3.60 7.90 x 2.60 6.80 x 2.60 | 1.55 1.55 1.55 |
| Irony Big Loomi (Alu) | 380 | 9.50 x 3.60 | 1.55 |
| Irony Lady Lady Inox/Alu | 377 | 6.80 x 2.60 | 1.55 |
| Irony Medium Inox/Alu 2 | 329 397 377 | 7.90 x 3.10 7.90 x 2.60 6.80 x 2.60 | 1.55 1.55 1.55 |
| Irony Nabab 3 | 397 377 | 7.90 x 2.60 6.80 x 2.60 | 1.55 1.55 |
| Irony New Big | 377 | 6.80 x 2.60 | 1.55 |
| Irony Big Classic | 377 | 9.50 x 3.60 | 1.55 |
| Irony X-Lite Big | 377 | 11.40 x 0.90 | 1.55 |
| Irony Petite Seconde | 394 | 9.50 x 3.60 | 1.55 |
| Irony Scuba 200 Inox/Alu | 397 | 7.90 x 2.60 | 1.55 |
| Irony Scuba Inox/Alu | 394 | 9.50 x 3.60 | 1.55 |
| Irony Scub Loomi Alu | 380 | 9.50 x 3.60 | 1.55 |
| Irony Sqare Lady | 377 | 6.80 x 2.60 | 1.55 |
| Jelly in Jelly + J in J Access + Puzzle Motion | 377 | 6.80 x 2.60 | 1.55 |
| Lady | 329 | 7.90 x 3.10 | 1.55 |
| Musicall | 390 | 11.60 x 3.10 | 1.55 |
| New Gent | 390 | 11.60 x 3.10 | 1.55 |
| Pop Access | 329 | 7.90 x 3.10 | 1.55 |

BATTERY LIST


| <u>Collection</u> | <u>Renata Designation</u> | <u>Ø t x Ht (mm)</u> | <u>Battery voltage (V)</u> |
|---------------------------------------|---------------------------|----------------------|----------------------------|
| Pop/Pop Midi | 329 | 7.90 x 3.10 | 1.55 |
| Pop-Up | 390 | 11.60 x 3.10 | 1.55 |
| Scuba + Scuba Access + Scuba Snowpass | 390 | 11.60 x 3.10 | 1.55 |
| Scuba Loomi | 389 | 11.60 x 3.10 | 1.55 |
| Skin | 317 | 5.80 x 1.60 | 1.55 |
| Skin Beat | 373 | 9.50 x 1.60 | 1.55 |
| Solar | GC 1120 | 11.0 x 2.0 | Gold Cap |
| Square 3/5 cm ² | 377 | 6.80 x 2.60 | 1.55 |
| Stop | 390 | 11.60 x 3.10 | 1.55 |
| Swatch Touch | CR1632 | 16.0 x 3.20 | 3.00 |
| Touch Alarm/ Game/Bi-Timer | CR2025 | 20.0 x 2.50 | 3.00 |
| Turnover | 377 | 6.80 x 2.60 | 1.55 |



IMPORTANT: The manufacturer's warranty does not cover the SWATCH watch handled by non-authorized persons.

BATTERY CHANGE CHRONO

ALL MODELS

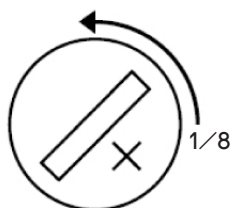

When replacing the battery, be careful not to damage the (+) terminal which is on the side. The (-) terminal is at the bottom.

BATTERY LIST

| Collection | Renata Designation | Ø t x Ht (mm) | Battery voltage (V) |
|--|--------------------|---------------|---------------------|
| Aquachrono | 394 | 9.50 x 3.60 | 1.55 |
| Chrono | 394 | 9.50 x 3.60 | 1.55 |
| Chrono Alarme | 394 | 9.50 x 3.60 | 1.55 |
| Chrono Plastic | 394 | 9.50 x 3.60 | 1.55 |
| Irony Chrono Inox/Alu | 394 | 9.50 x 3.60 | 1.55 |
| Irony New Chrono | 394 | 9.50 x 3.60 | 1.55 |
| X-Lite Chrono | 394 | 13.20 x 1.45 | 1.55 |
| Irony Diaphane Chrono/Chrono Navigator | 394 | 9.50 x 3.60 | 1.55 |
| Irony Medium Chrono Inox/Alu | 394 | 9.50 x 3.60 | 1.55 |
| Irony Retrograde | 394 | 9.50 x 3.60 | 1.55 |
| Irony Scuba 200 Chrono | 394 | 9.50 x 3.60 | 1.55 |
| Irony Scuba 200 Chrono Loomi Alu | 380 | 9.50 x 3.60 | 1.55 |
| Irony THE Chrono | 394 | 9.50 x 3.60 | 1.55 |
| Skin Chrono | 377 | 6.80 x 2.60 | 1.55 |
| Square Chrono | 394 | 9.50 x 3.60 | 1.55 |



IMPORTANT: The manufacturer's warranty does not cover the SWATCH watch handled by non-authorized persons.